

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://pira.nt-rt.ru> || par@nt-rt.ru

PIRA

Chimney KIT

PIRA ovens are equipped with an integrated firebreak and an airflow regulator, ready to operate from the first moment simply by placing them under a hood. The smoke exit diameter is 180 or 210 mm, depending on the model.

If you want to install a PIRA oven in a kitchen together with the other cooking elements, although our oven already has a built-in firebreak and air outlet regulator, we recommend installing the oven with at least the external firebreak and the hat.

The external firebreak guarantees, like the internal one, that there are no flames or sparks that could come out through the smoke exit, but since it is visible to the naked eye, unlike the internal firebreak, there is no possibility of starting the oven without realizing about its absence.

In accordance with the existing legislation in certain countries, there is also the possibility of acquiring these accessories as external elements for the oven. The regulations in most countries indicate that there must be an independent smoke exit for the fumes originated from solid fuels (firewood or charcoals) and in some cases it is required a visible to the naked eye firebreak, so it will always be necessary to observe the applicable legislation. Thus, taking into account the legislation and the customer's needs, the chimney kit can be adapted to all needs.

For greater efficiency, all PIRA ovens must be installed under an extractor hood, allowing two possibilities:



-Installation with direct connection from the oven's smoke exit to the outside, without using any of our accessories chimney kit. Despite this, we will need to use an extractor hood for efficient evacuation of the cooking fumes that will come out of the oven when the door is opened.

-Install the chimney kit in one of its multiple versions, this is the most common option chosen by professionals.

The chimney Kit is available in two versions, a chimney kit with a not modular firebreak and a chimney kit with a modular firebreak.

Chimney kit with non modular firebreak

Kit available for the models Pira 50, 70, 70xl, 80, 90 and 90D.
It can be chosen with or without external regulator, always taking into account country regulations, the components of the chimney kit are:


Hat:
It slightly lowers the temperature of the smoke, ensuring a better flow and supplements the security of the interior firebreak by preventing anything from entering the oven through the chimney.

External firebreak:
Like the inner firebreak, it prevents any spark or flame from coming out. **Important, never wash under water.**

External Regulator:
It regulates the smoke exit with an external device, in addition its tube shape also guarantees a better flow.

Coupler ring:
Part needed to fit the External firebreak without the External Regulator.

Adapter:
Reduction of the smoke exit and hot air from the oven, from 180 mm to 150 mm.

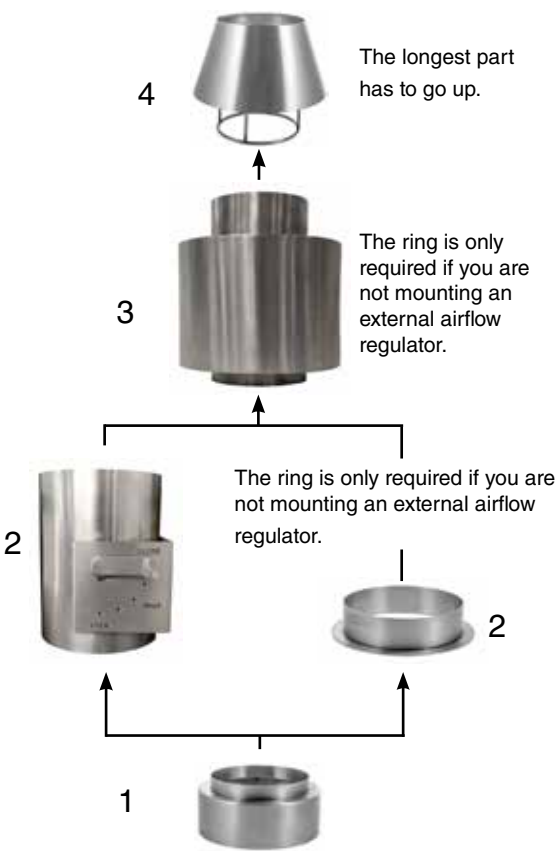

CHIMNEY KIT



Chimney kit with modular firebreak

For PIRA 120 ovens, the only chimney kit possible is a FIREBREAK120 + HAT 120. This revolutionary kit is removable and allows the user to wash it with water, without fear of obstructing the firebreak airflow.

It is common that in non-modular firebreaks, which have to be cleaned hitting it with small blows, some users put the firebreak under water to clean it, this is a mistake, because the traces of soot plus the traces of water form a pasty mixture similar to cement that will make the external firebreak useless.

We also have the option of non modular firebreak chimney kit for the rest of the models, and also in a shorter version.

This KIT also offers the possibility of a totally blind hat for the chimney kit.



May 2022

43

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://pira.nt-rt.ru> || par@nt-rt.ru